

# INSTALLATION INSTRUCTIONS

## FLEX-SEAL® Unshielded Coupling

# FS



*Flexible sewer couplings that connect similar and dissimilar pipe materials and pipe sizes.*

UNSHIELDED REPAIR COUPLING

1



Loosen bolts on stainless steel tightening clamps. Do not remove the tightening clamps from the gasket.

2



Slide the Flex-Seal® Unshielded Coupling over the plain spigot ends of the two pipes to be joined.

3



Tighten clamp bolts alternately and firmly to 60 in/lbs. of torque.



Mission Rubber Company LLC | 1660 Leeson Lane | Corona, CA 92879  
USA toll free 800.854.9991 fax 800.637.4601

[missionrubber.com](http://missionrubber.com)

REV. 6/15



**MISSION**  
RUBBER COMPANY

connected, for good™