INSTALLATION INSTRUCTIONS




FLEX-SEAL® ARC Adjustable Repair Coupling



Where there is a need to withstand shear forces, deflection and improved alignment. For joining similar and dissimilar pipe sizes and pipe materials.




SHIELDED REPAIR COUPLING

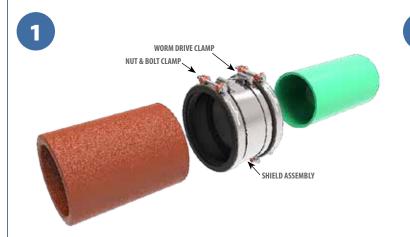


Loosen bolts on stainless steel shield assembly (worm drive clamps) and end clamps (Nut & Bolt). Do not remove the shield assembly or end clamps from the gasket.



Slide the Flex-Seal® ARC Coupling over the plain spigot ends of the two pipes to be joined.

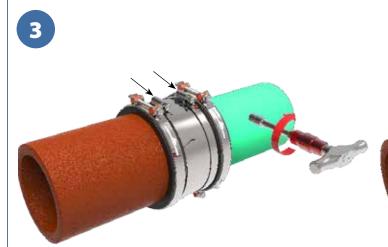

Tighten worm drive clamps alternately and firmly to 60 in/lbs. of torque.

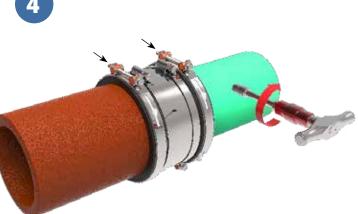

Tighten Nut & Bolt clamps alternately and firmly to 60 in/lbs. of torque.



Mission Rubber Company LLC | 1660 Leeson Ln. | Corona CA 92879 USA **toll free** 800.854.9991 **fax** 800.637.4601

