

WIRING INSTRUCTIONS

TITLE




18 GAUGE PISTOL GRIP SHEAR

BULLETIN

58-01-1807

MILWAUKEE ELECTRIC TOOL CORP. 13135 WEST LISBON RD. BROOKFIELD, WIS.

DATE
July 2011

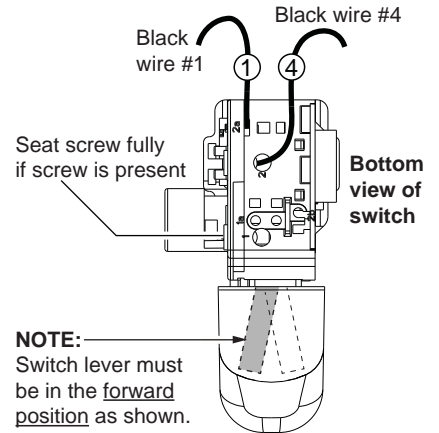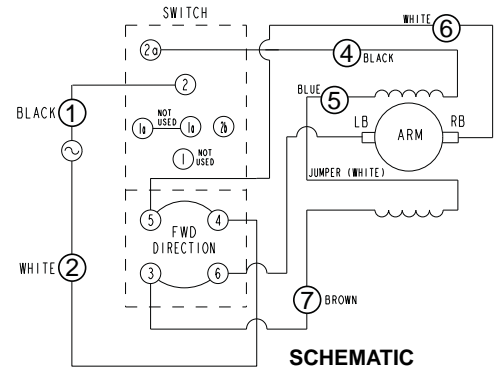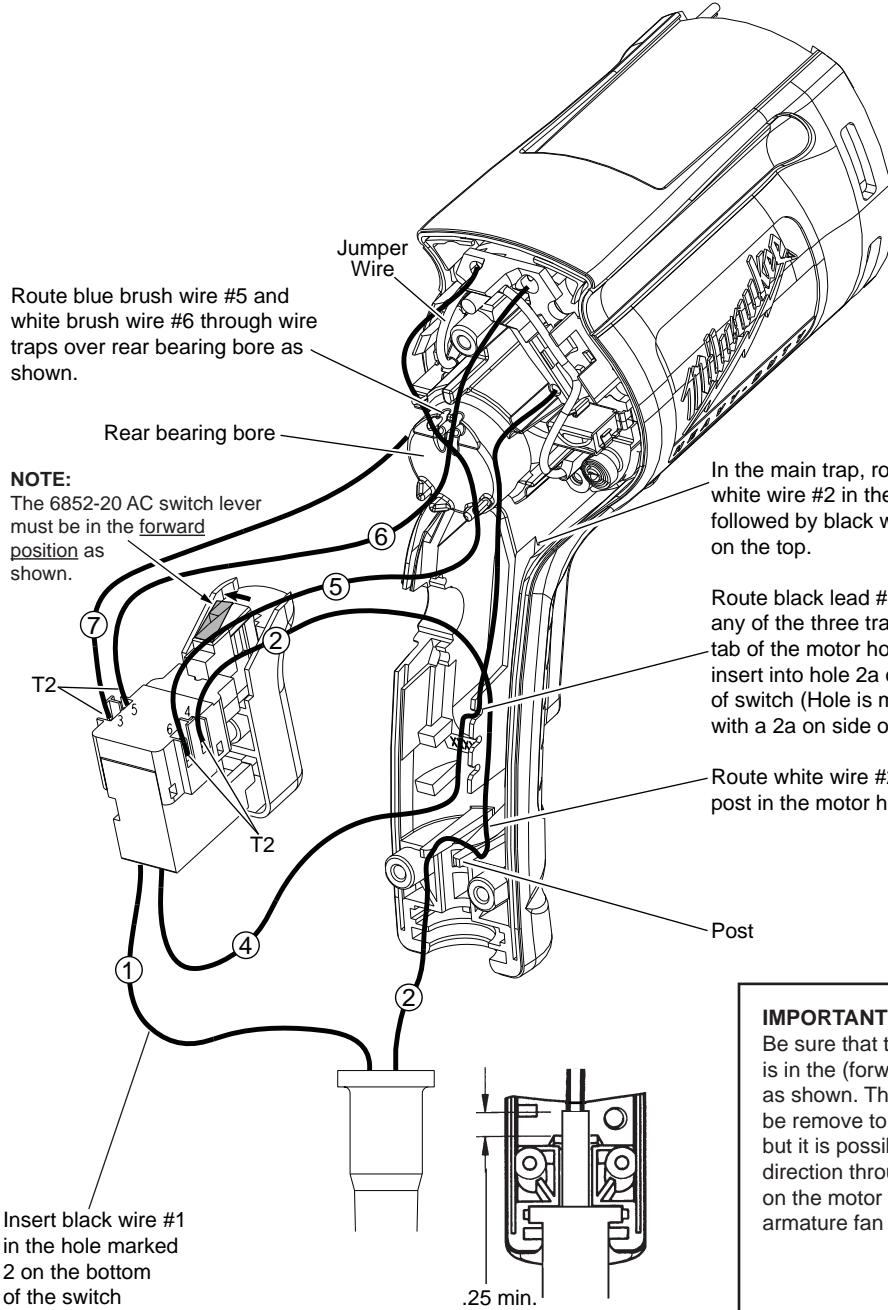

IMPORTANT NOTE:
Be sure that the spindle rotation is in the (forward) direction, as shown. The shear must be removed to verify this direction, but it is possible to determine the direction through the exhaust ports on the motor housing viewing the armature fan direction.

OUTPUT SPINDLE ROTATION

Motor Housing

Shear Head

WIRING SPECIFICATIONS				
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation
1	Black	*	----	*Component of cord set, pin hsg. assy. or blade hsg. assy.
2	White	*	----	*Component of cord set, pin hsg. assy. or blade hsg. assy.
4	Black	**	----	**Component of the brush card assembly.
5	Blue	**	----	**Component of the brush card assembly.
6	White	**	----	**Component of the brush card assembly.
7	Brown	**	----	**Component of the brush card assembly.

TERMINAL DESCRIPTION		
Code	Part No.	Qty.
T2	23-74-1060	4